



How to install BannerTrac[®] hardware

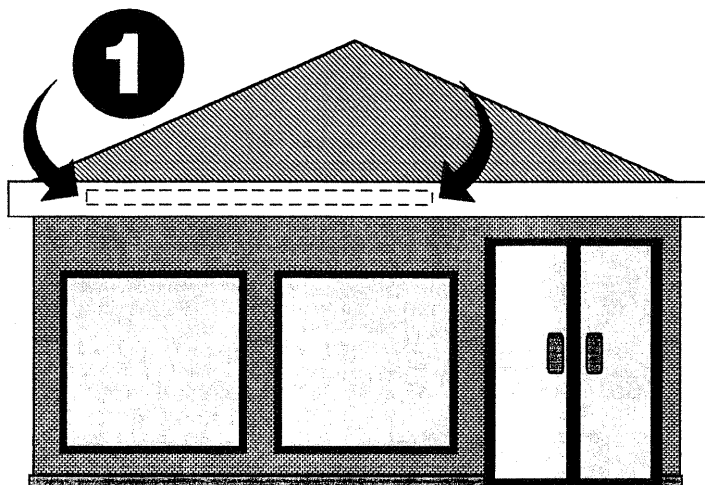



TOOLS REQUIRED

- #2 Phillips screwdriver
- Flat-blade screwdriver
- Level
- Electric drill
- Step ladder, if needed
- .25 Masonry drill bit (for masonry installation) or .125 diameter twist drill bit (for wood installation)

- Determine the appropriate location for installation on the building, fence or other flat surface.
- Mark the ends, keeping in mind that all track sections are 61" wide.

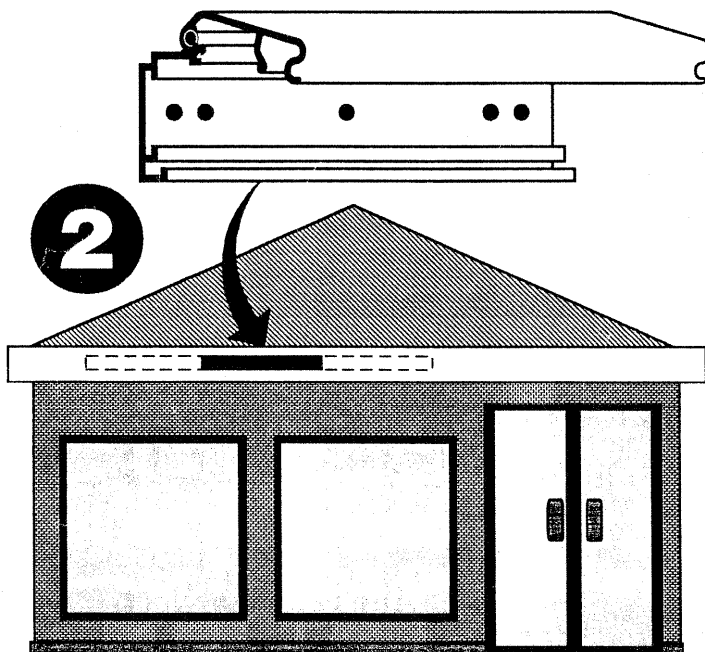

- Open the BannerTrac sections to expose the mounting holes.
- Locate the position for the center track ... hold a section in place ... and mark and drill the center hole.*
* If you are using an even number of sections, install either one of the two middle pieces.
- Screw the BannerTrac section in place through the center hole.**
** If you are using only one or two Bannertrac sections, you need to insert the clip locks (step 4) prior to screwing the sections to the building.
- Level the section, and mark and drill the second hole in from each end.
- Screw in the remaining two fasteners.

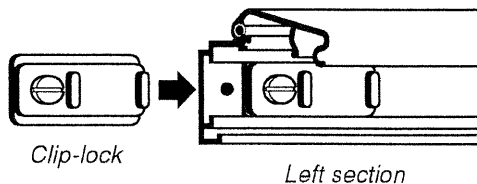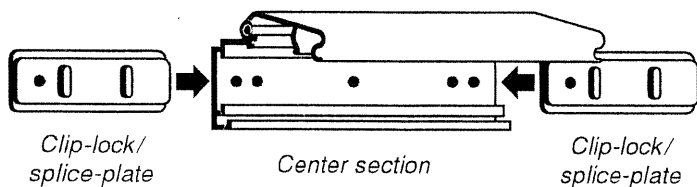


3

Slide a clip-lock/splice-plate (long plastic part) into each end of the mounted (center) section.

Install the rest of the middle sections, if any, as described in steps 2 and 3. End with clip-lock/splice-plate.

4

- Slide the clip-lock into the left end (past the first hole) of one of the two remaining (unmounted) sections.
- Use a flat-blade screwdriver (or a penny) to tighten the screw on the clip-lock.

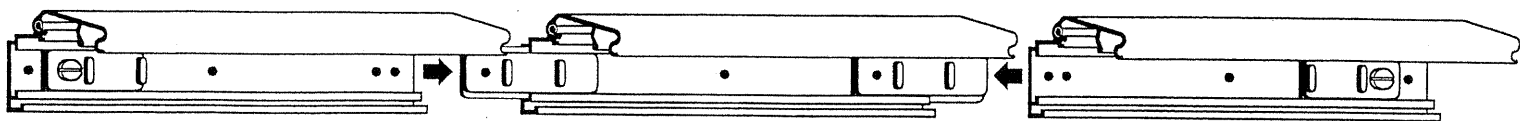

Left section


Center section(s)

Right section


5

- 5a. Slide the left end section (with clip-lock in place) on to the left clip-lock/splice-plate of the center section(s). Level the left section ... mark and drill the center hole, the outer hole on the left, and the second hole in from the right end ... and screw the section in place.
- 5b. Install the right end section as described in steps 4 and 5, using the center hole, the outer hole on the right, and the second hole in from the left end.

6

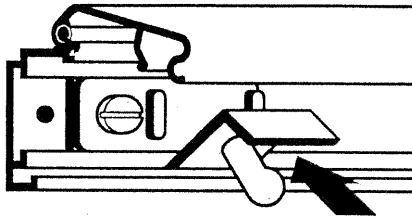


- 6a. Snap a slide hook into the clip-lock at each end.

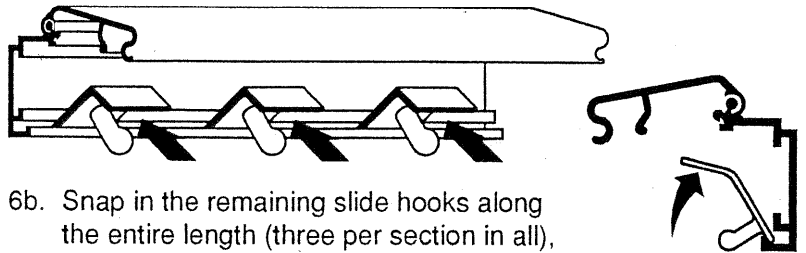


- 6b. Snap in the remaining slide hooks along the entire length (three per section in all), and close all the sections.

How to install banner

7

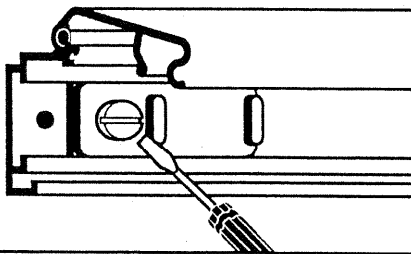


- 7a. Open all of the BannerTrac sections.
- 7b. Adjust and tighten the screw on the clip-lock at the left end, using a flat-blade screwdriver (or a penny).

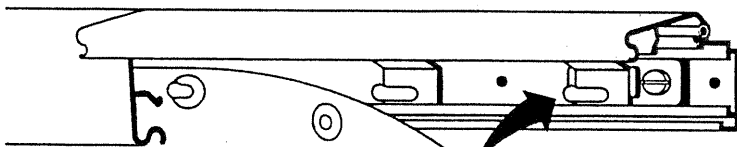

8

- 8a. Working left to right, hang the banner on the slide hooks, adjusting the hooks to match up with the grommets. Keep a slight tension on the banner.
- 8b. Close each BannerTrac section after hanging that portion of the banner.
- 8c. Finally, adjust and tighten the screw on the right-end clip-lock to secure the last hook and to maintain tension on the banner. Close the last (right) section.

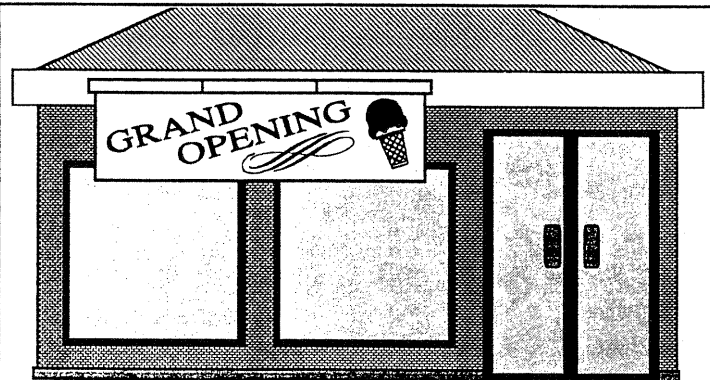

Toll-free 1-800-228-8925

Phone: 248-553-1900
Fax: 248-488-5700



MDI

Marketing Displays International

38271 W. Twelve Mile Rd. • Farmington Hills, Michigan 48331

BannerTrac is a trademark of MDI. Covered by U.S. patent 4,145,828. Foreign patents. Other patents pending. © 1994, MDI. All rights reserved.